


**FIRST** - Identify which Flex arm you have.


A) Series 4 Delivery unit Flex arm; reference PN 8733

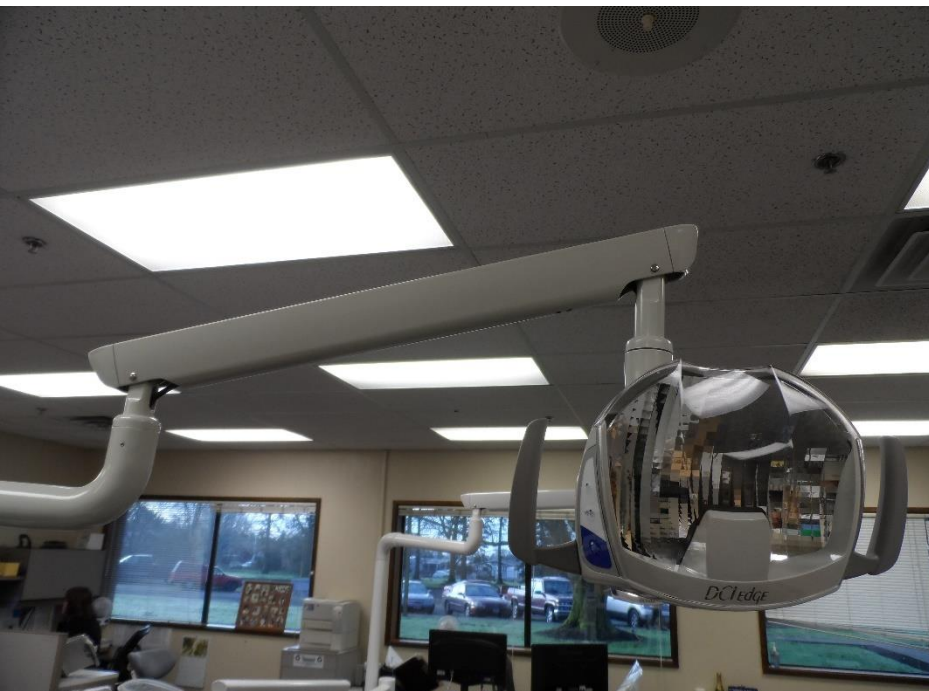

B) Series 4 Light Flex arm / Series 5 Delivery unit

## Series 4 Operator Light and Series 5 Delivery Unit Flex Arm Adjustment

First, pull off the end cap of the light head flex arm; simply pull straight back and wiggle the cap.

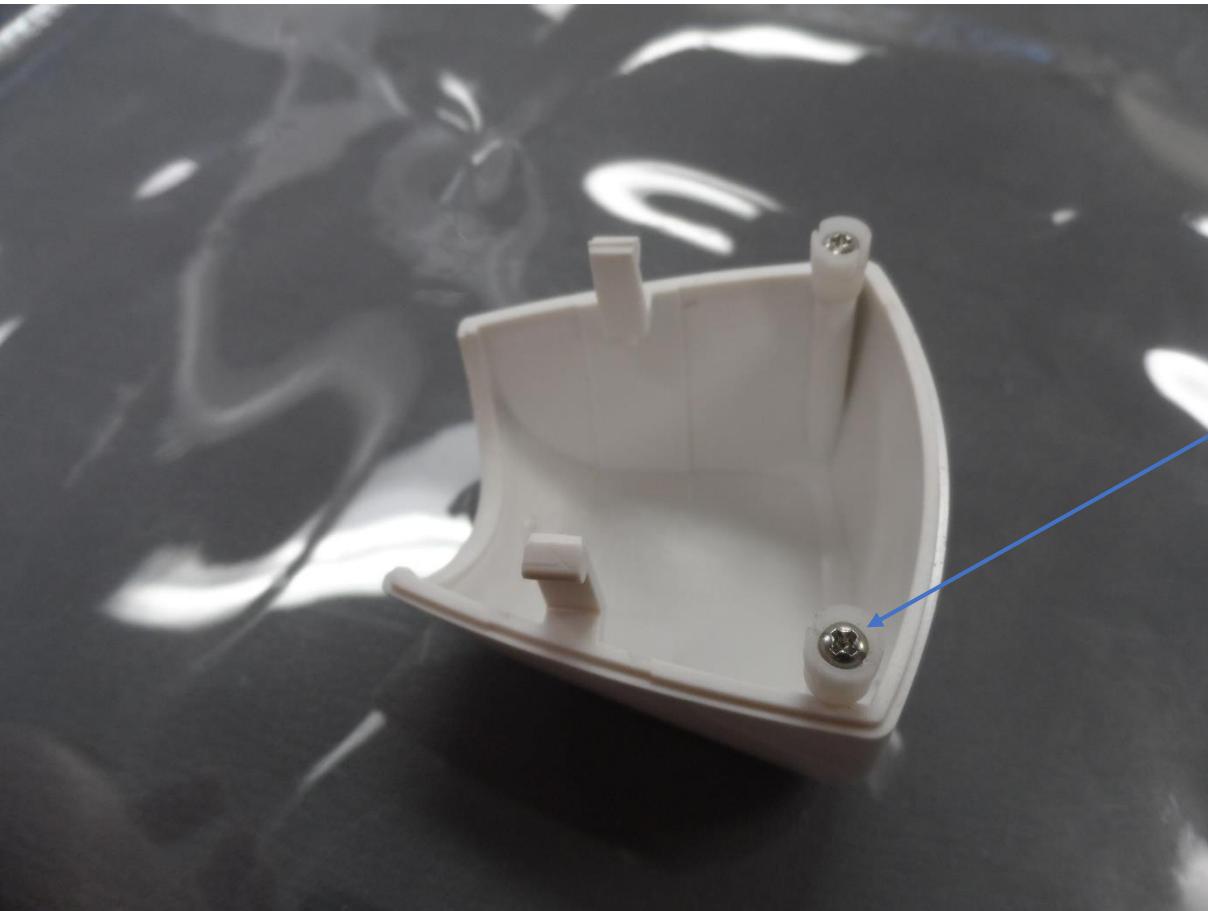

Tighten for more tension/loosen  
for less

To **DECREASE** Lift of the Light Head/Delivery Unit **TIGHTEN** the Allen key in the end of the Light Head side of the arm

**CLOCKWISE  
ONLY!!!**



**CLOCKWISE  
ONLY!!!**

To **INCREASE** Lift of the Light Head/Delivery Unit **TIGHTEN** the Allen key in the end of the opposing side of the arm

5/32 Allen Key



**CLOCKWISE  
ONLY!!!**

**CLOCKWISE  
ONLY!!!**

Opposite of light head




## Series 4 Delivery Unit Flex Arm Tension Adjustment



Pull the belly strip down  
to gain access to the  
adjustment rod

Adjustment Rod

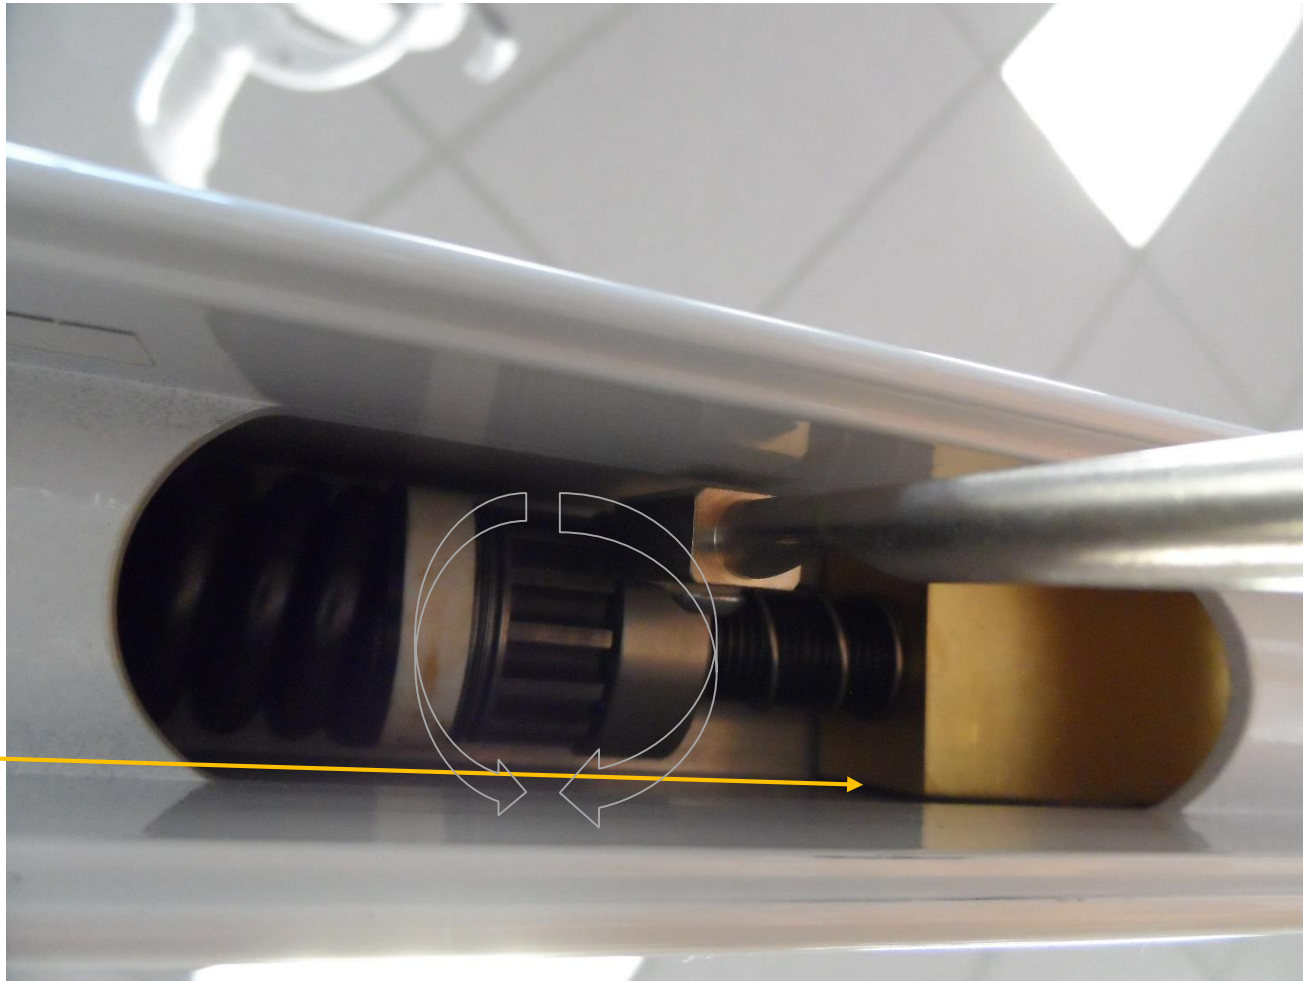

Pull the rod in this direction to allow for rotation of the rod assembly in order to tighten or loosen the spring tension.

**Clockwise** for **Increased** tension / **Counterclockwise** for **Decreased** tension